



a.b.e.[®] Construction Chemicals

METHODOLOGY

dura.[®] latex screeding system

Slurry - mix thoroughly to a smooth consistency

Components:

1 : 1 **dura.[®] latex** to water v/v

1 : 1 sand to cement v/v

Blend the components to provide a viscous liquid that is easily brushed into the surface.

Screed - minimum 10mm thick

Components:

3 : 1 sand to cement v/v

1 : 3 **dura.[®] latex** to water v/v


Mix to the required consistency

Maintain a W/C ratio of > 0,4

Slurry must be wet during application.

Never featheredge, always minimum of 10mm vertical saw cut into provide a the surface for repair systems.

Concrete must be sound, free of laitance, oil or friable matter - etched or scabbled
See 'Preparation of surfaces' data sheet.

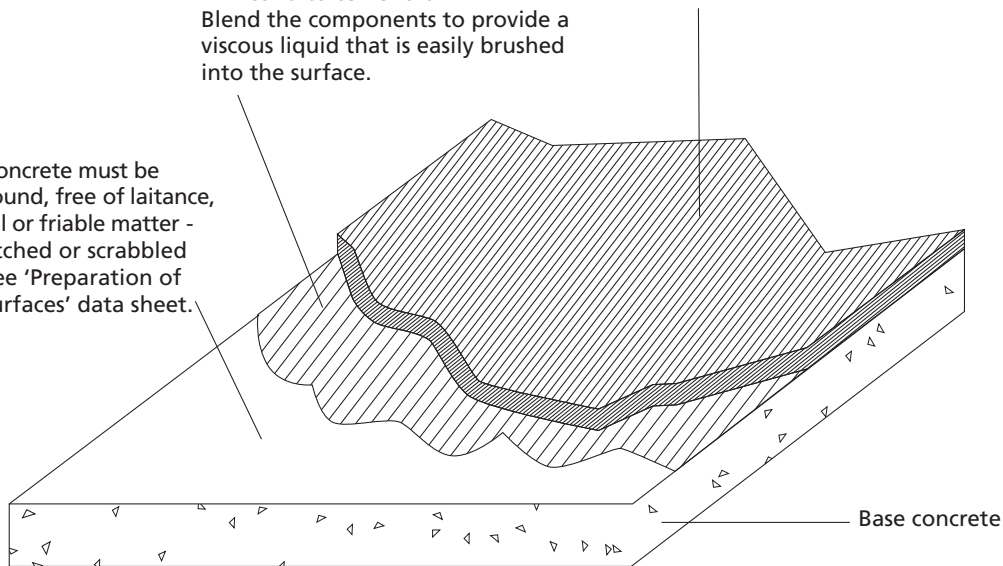

See relevant data sheets for details